

(HOUR METER)

Unique features:	Specification:
<ol style="list-style-type: none"> 4-digit one row 7-segment display. True RMS measurement and perfect linear response. Two switches for onsite setting. Compact size and light weight. ABS dust-proof rugged casing. Touch proof voltage & current terminals. Password protection. 	Auxiliary Supply: Universal Auxiliary (80-300V AC)Supply. Accuracy: 0.5% (class 0.5) Dimension: 96x96x57 mm. Panel Cutout: 92 ⁺² mm x 92 ⁺² mm. Standards: IP-20(Back),IP-65(Front)

PROGRAMING KEYS DETAIL

Key	In Set (programming)mode	In RUN (Measurement)mode
→RIGHT	To select a value & To accept a value	NO action
↓ DOWN	To edit the value down-ward in edit mode and scroll through the parameters.	To scroll down the page to look at different parameters.

Use DOWN key to navigate through the parameters.

ENTERING CONFIGURATION (SETUP) MODE

Follow the steps mentioned below to configure the setup parameters through front panel keys.

Steps	Actions	Display Reads	Comments
1	Press DOWN keys first then RIGHT key together for 5 sec, to ENTER programming mode	0000 With first digit "0" blinking.	
2	Press DOWN Key till the first digit reads "1"	PASSWORD = 1000 (default/factory set).	Default is 1000
3	Press the RIGHT Key to shift the blink digit to right (4 times)	Display "En-Y": if password correct ----- Display "En-n": if password wrong	<u>if password correct:</u> you can edit saved parameter. <u>if password wrong:</u> you can only see saved parameter.
4	Press DOWN key	Displays 15EL	Select mode to display time parameters
5	Press RIGHT key	Display 10d1/10d_H	MOD.M-Display hour & minute as hh.mm MOD.H-Display hour only as hhhh
6	Press RIGHT key to edit value	Editable digit blinks.	
7	Press DOWN key to change	Changed digit blinks.	Select required value.
8	Press RIGHT key to select The mode	Display 15EL	
9	Press DOWN key	Display 1r5t	Parameter to reset the current time and this time Will be treated as old time
10	Press RIGHT key to select the Desired action.	Editable digit blinks.	Select required value.
11	Press DOWN key to change Blinking digits	Changed digit blinks.	
12	Press RIGHT key to select	Display 1r5t	
13	Press down key	Display 0Ld_t	Parameter to display old time
14	Press RIGHT key to display Last old time	Display old time	Display mode is as per at delete time
15	Press RIGHT key	Display 0Ldt	
16	Press DOWN key	Displays "Y" Blinking to save or Displays "n" to discard	Yes to save the setting otherwise no
17	Press RIGHT key to memorize the changed parameters	Display returns to home page (time Display mode)	

- If Entered password is wrong, in this case user can only see the previously saved parameters and is not authorized to edit any of them.
- Previously saved parameter can only be changed if user saves the value by pressing RIGHT key while display showing "SAV-Y (Y Blinking) in configurations mode.
- If password other than the default is set, then memorize it. Meter will reject the programming if tried with wrong passwords. In such case meter will need to be reset and calibrated in factory only.